




Here is a handy valet tray to keep your sewing accessories neat and tidy .

JANOME



MC550E

We have been busy

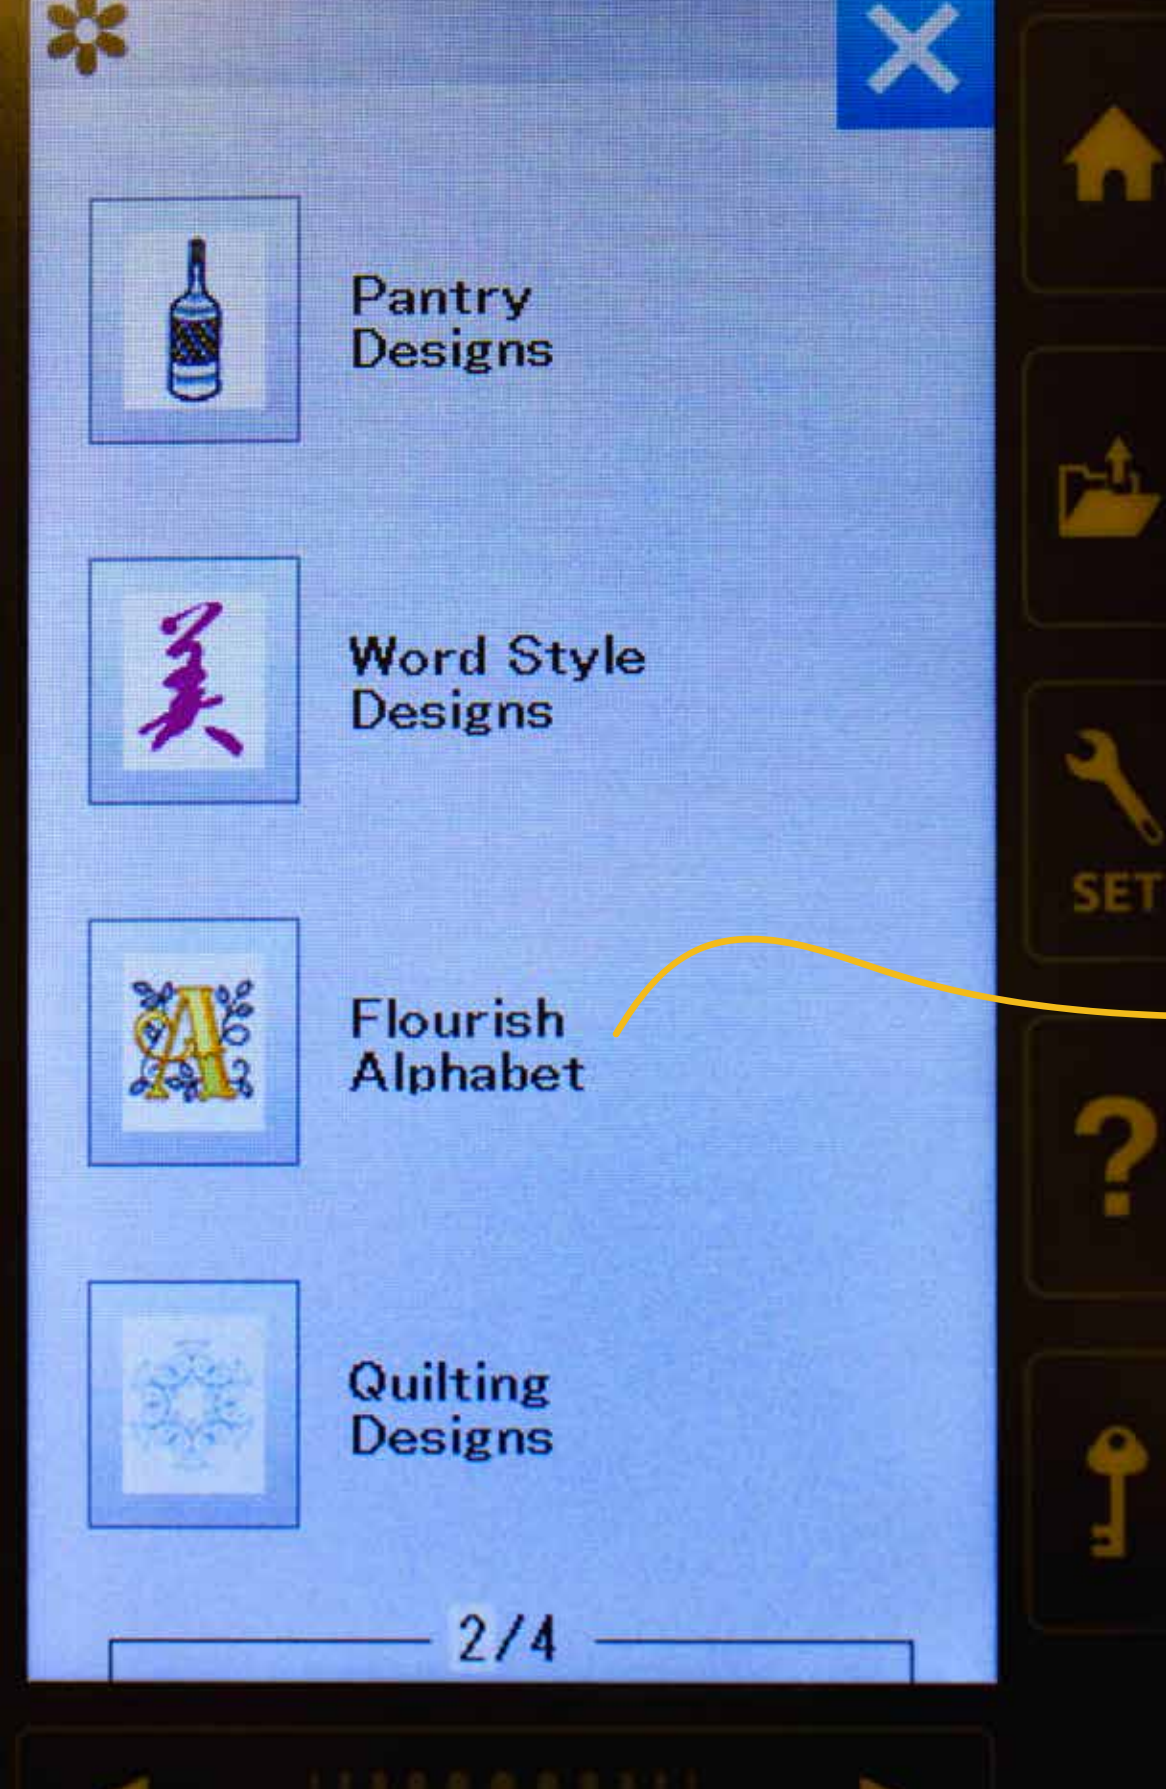


Select design #31



Select design #31 from the Flourish
Alphabet Design Category

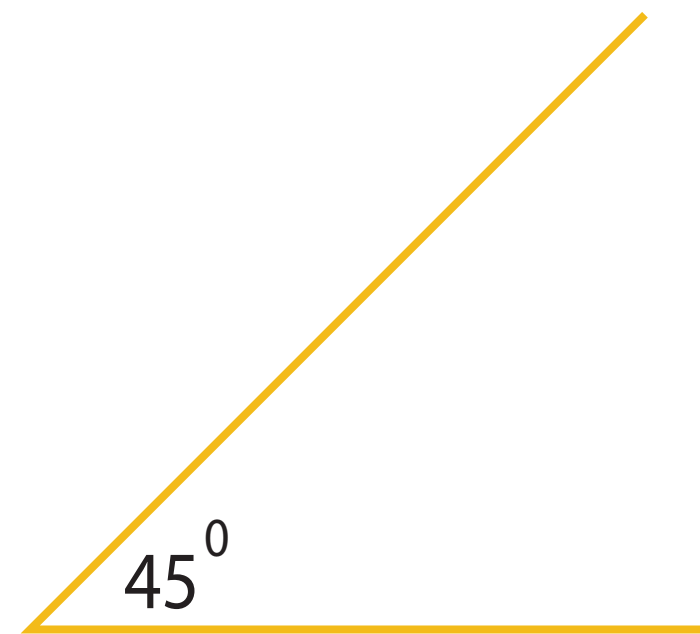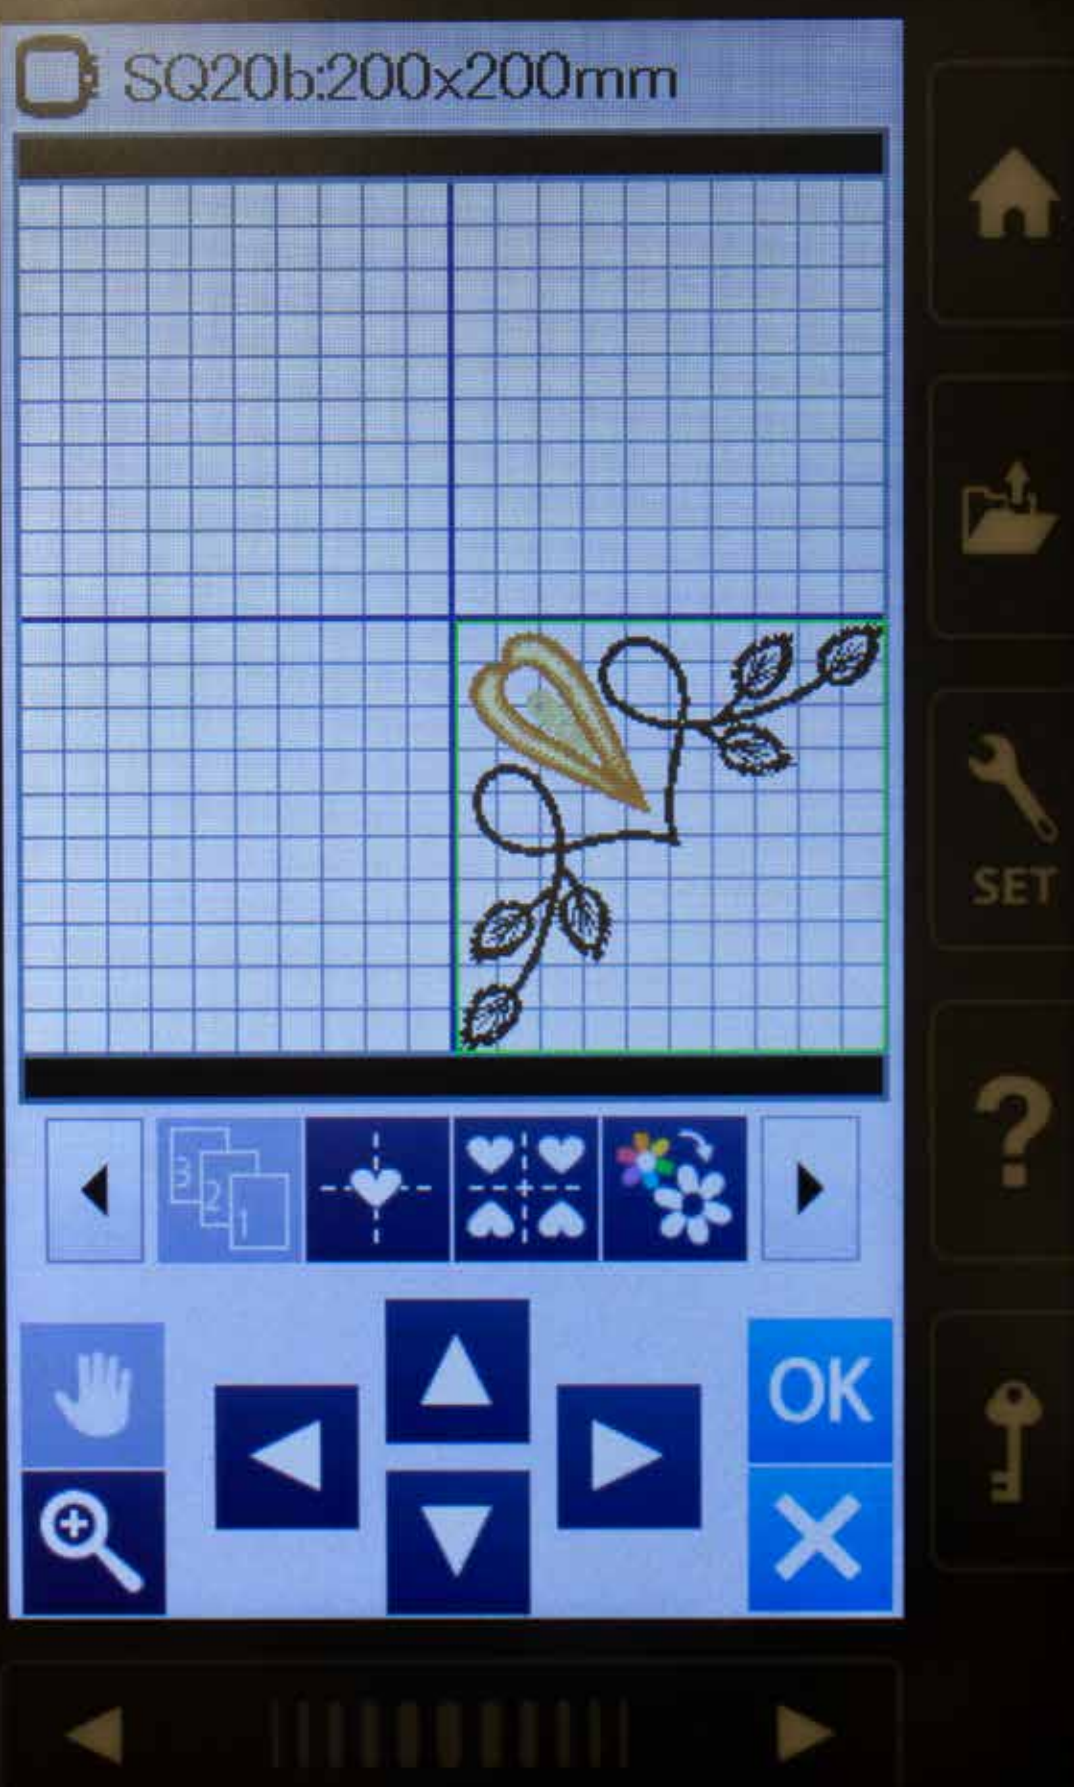

Rotate the design 45 degrees and move to the bottom right corner.

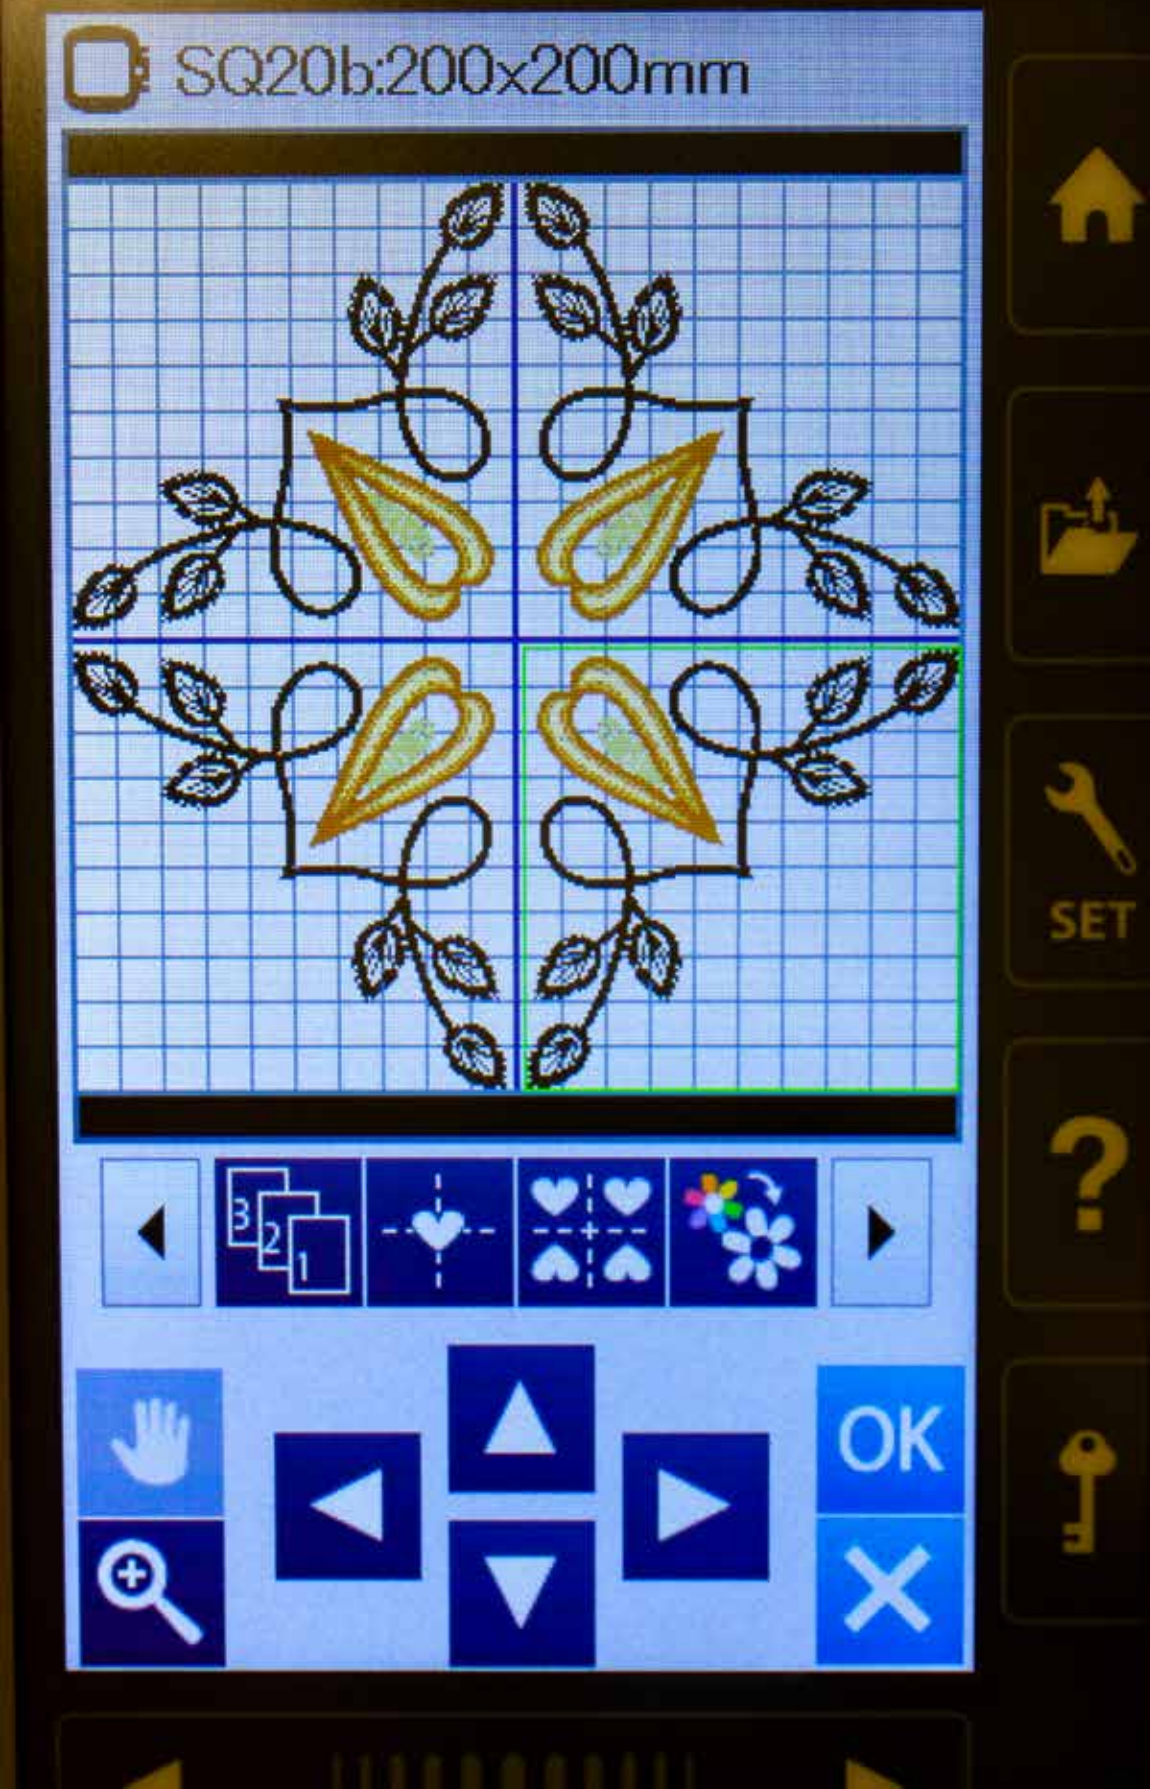

Select the Cornering Tool

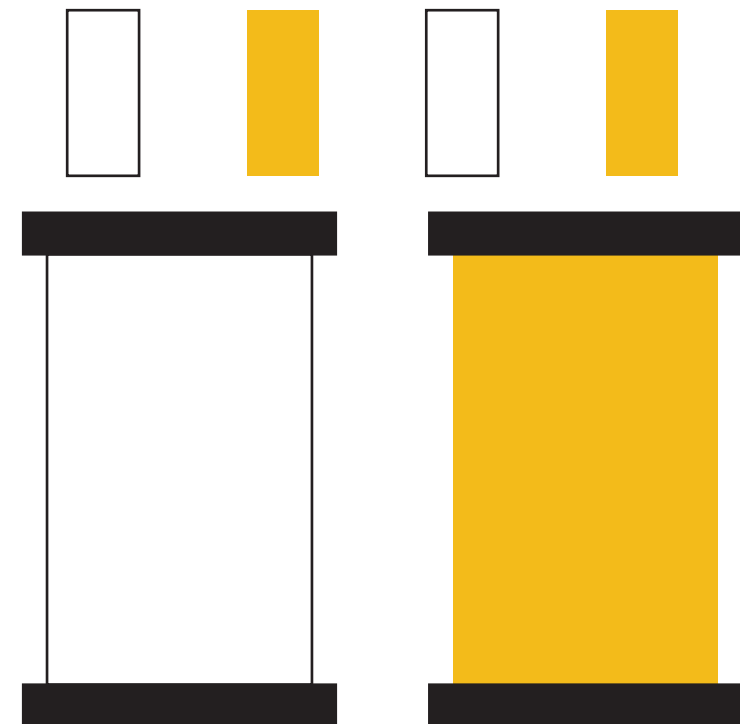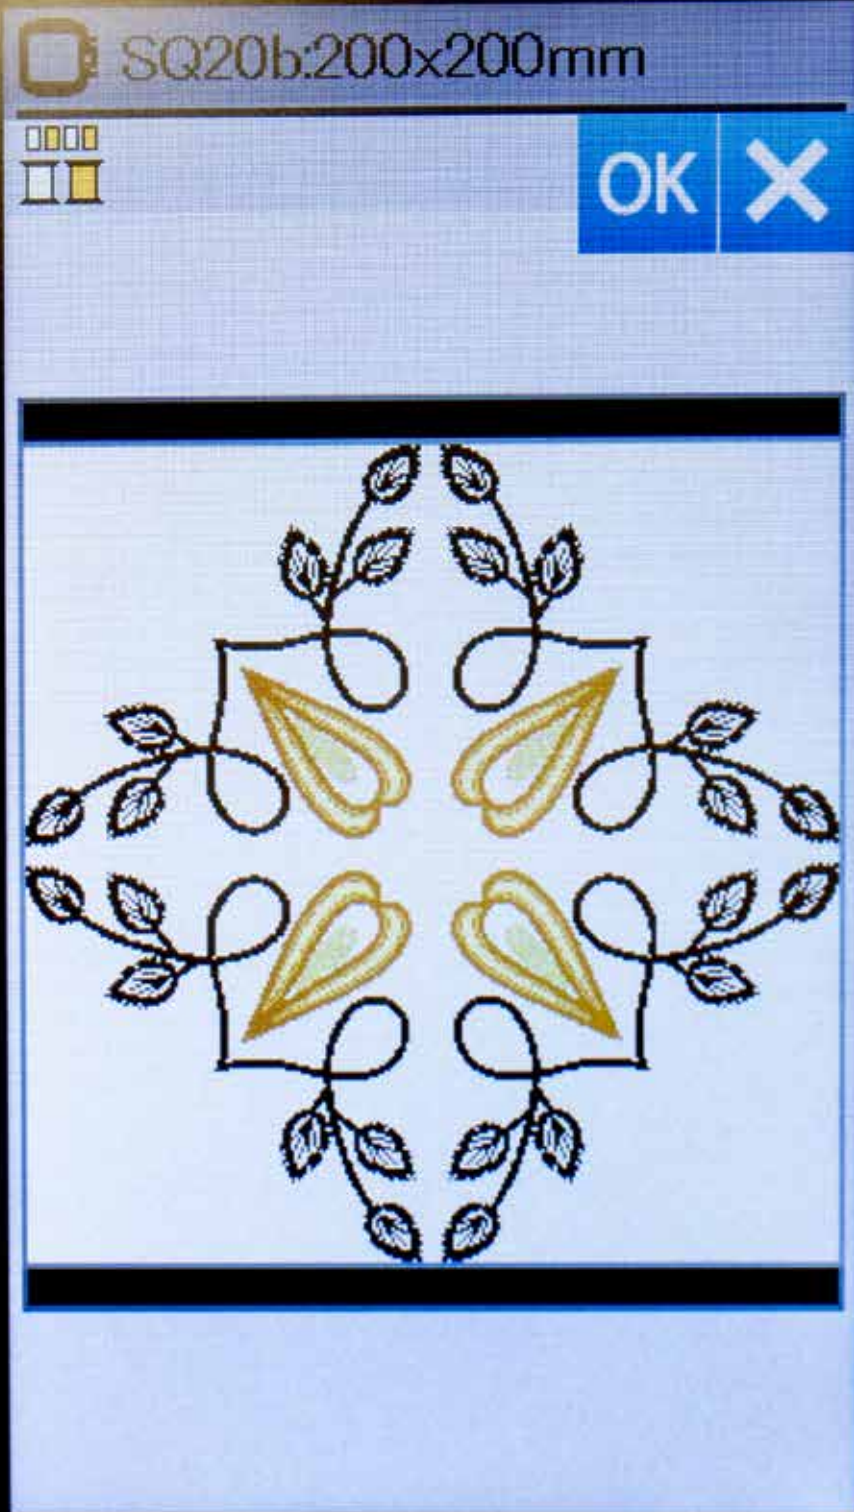


Select the Colour Sorting Tool



Stitch out the design. Cut Embroidered fabric and backing fabric back to 9 ½ inch x 9 ½ inch block (240x240mm).



Attach fusible fleece to the back of the backing fabric. Pin fabrics with right sides together, leave 3 inch (75mm) gap for turning.

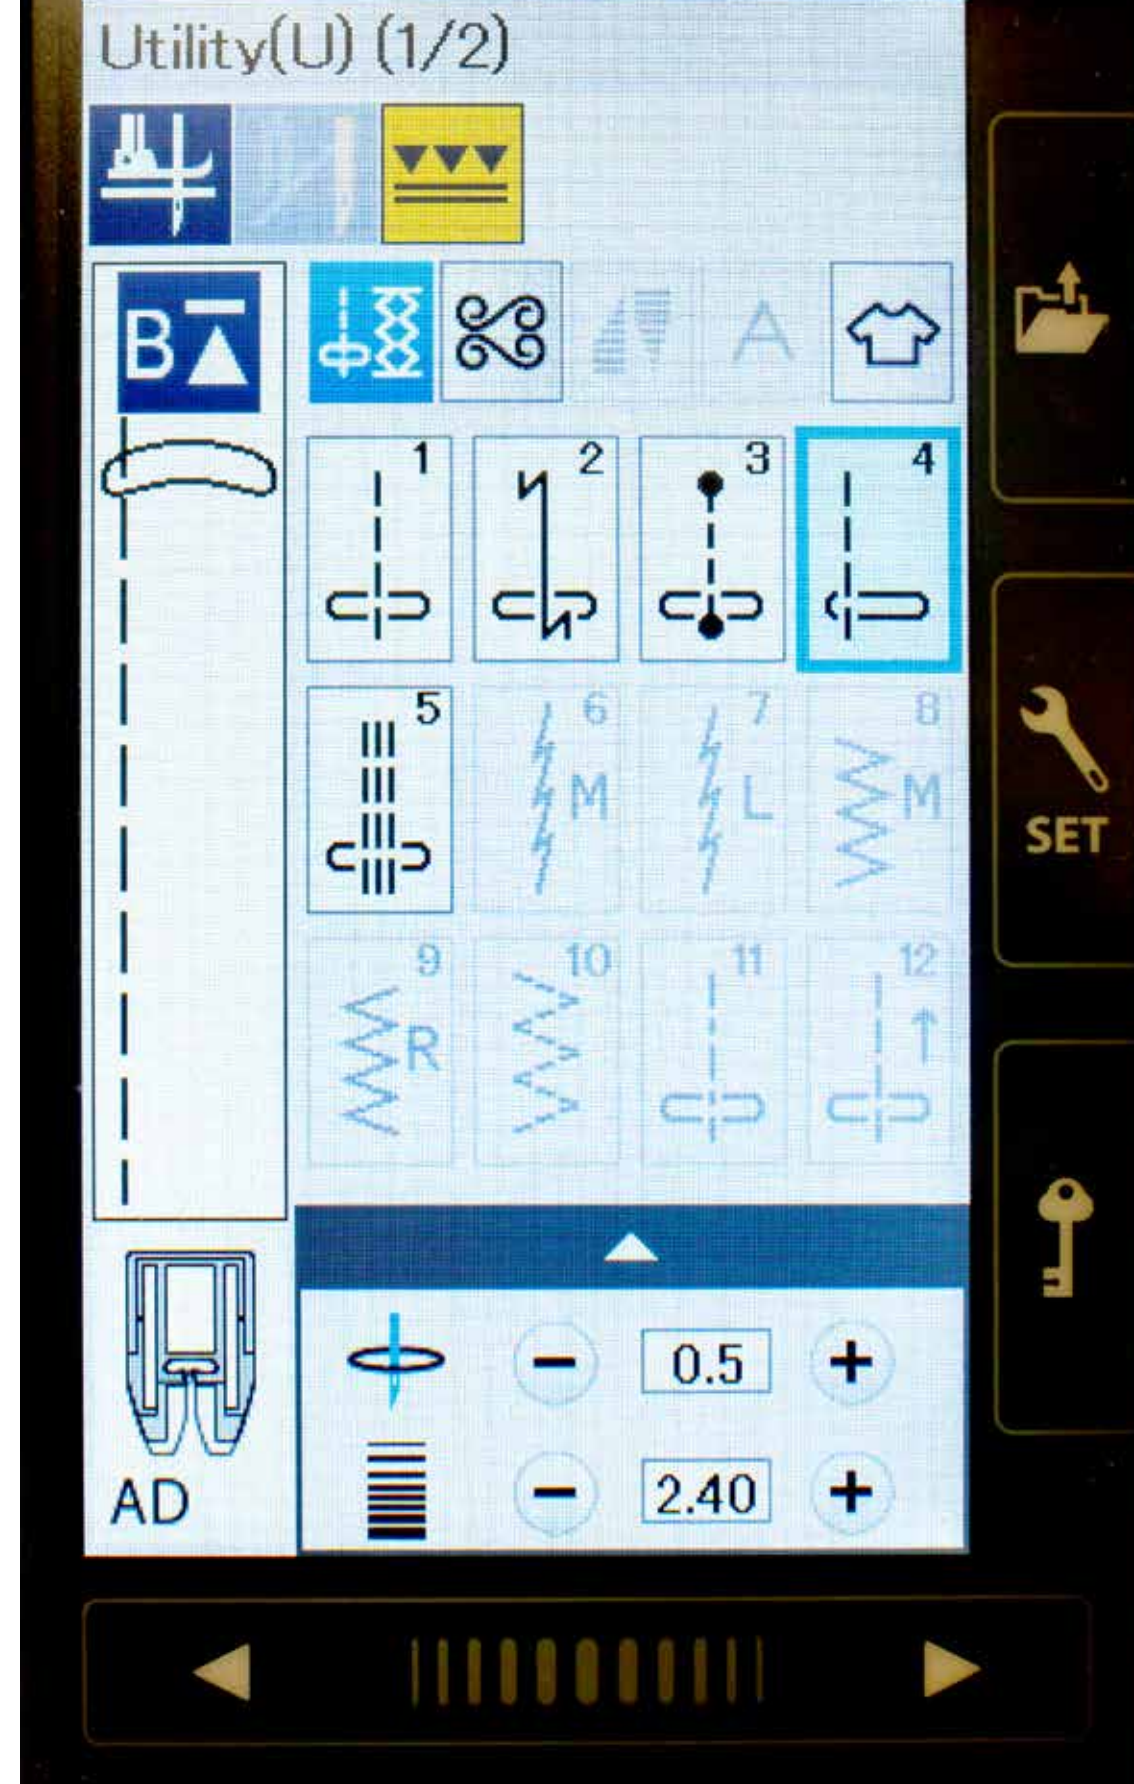

Attach the AcuFeed Flex Foot/Walking Foot.
Stitch a ½ inch seam (13mm) around the
block, leave opening then turn right side
out & press.



Using straight stitch, stitch a square border around embroidery then stitch 2 echo borders.



Bring the corners together to create a point, stitch across the corner to create the sides.



Memory Craft 550E

“ I love using the cornering tool to make my very own unique embroidery blocks for any project ”

Cindy, Brisbane

JANOME

MC550E

We have been busy